

This publication, including photographs, illustrations and software, is under the protection of international copyright laws, with all rights reserved. Neither this user's guide, nor any of the material contained herein, may be reproduced without the express written consent of the manufacturer.

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, the manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

### Trademarks

IBM, VGA, and PS/2 are registered trademarks of International Business Machines.

Intel, Pentium/II/III, Pentium 4, Celeron and MMX are registered trademarks of Intel Corporation.

Microsoft, MS-DOS and Windows NT/2000/XP are registered trademarks of Microsoft Corporation.

AMI is a trademark of American Megatrends Inc.

It has been acknowledged that other brands or product names in this manual are trademarks or the properties of their respective owners.

### Static Electricity Precautions

1. Don't take this motherboard and components out of their original static-proof package until you are ready to install them.
2. While installing, please wear a grounded wrist strap if possible. If you don't have a wrist strap, discharge static electricity by touching the bare metal of the system chassis.
3. Carefully hold this motherboard by its edges. Do not touch those components unless it is absolutely necessary. Put this motherboard on the top of static-protection package with component side facing up while installing.

### Pre-Installation Inspection

1. Inspect this motherboard whether there are any damages to components and connectors on the board.
2. If you suspect this motherboard has been damaged, do not connect power to the system. Contact your motherboard vendor about those damages.

**Copyright © 2005  
All Rights Reserved  
PI865GVM7 Series, V3.0  
April 2005**

## Motherboard User's Guide


---

### Table of Contents

<b>Trademark .....</b>	<b>i</b>
<i>Static Electricity Precautions .....</i>	<i>i</i>
<i>Pre-Installation Inspection .....</i>	<i>i</i>
 <b>Chapter 1: Introduction .....</b>	 <b>1</b>
<i>Key Features .....</i>	<i>1</i>
<i>Package Contents .....</i>	<i>4</i>
 <b>Chapter 2: Motherboard Installation .....</b>	 <b>5</b>
<i>Motherboard Components .....</i>	<i>6</i>
<i>I/O Ports .....</i>	<i>8</i>
<i>Installing the Processor .....</i>	<i>9</i>
<i>Installing Memory Modules .....</i>	<i>10</i>
<i>Jumper Settings .....</i>	<i>12</i>
<i>Install the Motherboard .....</i>	<i>13</i>
<i>Connecting Optional Devices .....</i>	<i>14</i>
<i>Install Other Devices .....</i>	<i>16</i>
<i>Expansion Slots .....</i>	<i>18</i>
 <b>Chapter 3: BIOS Setup Utility .....</b>	 <b>22</b>
<i>Introduction .....</i>	<i>22</i>
<i>Running the Setup Utility .....</i>	<i>22</i>
<i>Standard CMOS Setup Page .....</i>	<i>23</i>
<i>Advanced Setup Page .....</i>	<i>24</i>
<i>Features Setup Page .....</i>	<i>26</i>
<i>Power Management Setup Page .....</i>	<i>28</i>
<i>PCI/Plug and Play Setup Page .....</i>	<i>29</i>
<i>BIOS Security Features Setup Page .....</i>	<i>30</i>
<i>CPU PnP Setup Page .....</i>	<i>30</i>
<i>Hardware Monitor Page .....</i>	<i>31</i>
<i>Load Optimal Defaults .....</i>	<i>32</i>
<i>Save Changes and Exit .....</i>	<i>32</i>
<i>Discard Changes and Exit .....</i>	<i>32</i>
 <b>Chapter 4: Software &amp; Applications .....</b>	 <b>33</b>
<i>Introduction .....</i>	<i>33</i>
<i>Installing Support Software .....</i>	<i>33</i>
<i>Bundled Software Installation .....</i>	<i>35</i>

### Notice:

Owing to Microsoft's certifying schedule is various to every supplier, we might have some drivers not certified yet by Microsoft. Therefore, it might happen under Windows XP that a dialogue box (shown as below) pop out warning you this software has not passed Windows Logo testing to verify its compatibility with Windows XP. Please rest assured that our RD department has already tested and verified these drivers. Just click the "Continue Anyway" button and go ahead the installation.

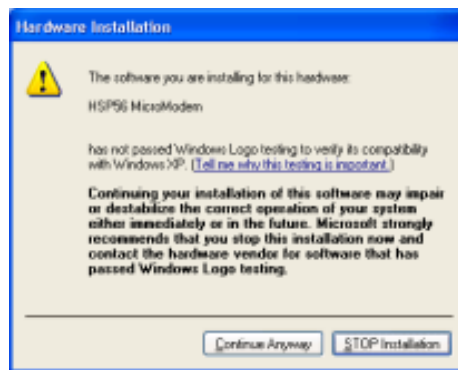

## Chapter 1 Introduction

This motherboard has a **LGA775 socket** for latest **Intel Pentium 4/Celeron D** processors with **Hyper-Threading Technology** and Front-Side Bus (FSB) speeds up to **800/533 MHz**. Hyper-Threading Technology, designed to take advantage of the multitasking features in Windows XP, gives you the power to do more things at once.

This motherboard integrates the **Intel 865GV Northbridge** along with **Intel I/O Controller Hub 5 (ICH5)** that supports the **Serial ATA** interface for high-performance and mainstream desktop PCs; the built-in **USB 2.0** providing higher bandwidth, implementing **Universal Serial Bus Specification Revision 2.0** and is compliant with **UHCI 1.1** and **EHCI 1.0**.

It supports 6-channel **AC'97 Audio Codec** and provides two **IDE Ultra DMA 100/66** channel. It has one **AGP Ultra slot**, one **CNR** and three 32-bit **PCI** slots. There is a full set of I/O ports including two PS/2 ports for mouse and keyboard, one VGA port, one serial port, one parallel port, one LAN port (optional), three audio jacks for micropone, line-in and line-out, and four back-panel USB 2.0 ports. In addition, onboard USB headers provide extra ports by connecting the extended USB module to the motherboard.

It is a **Micro ATX** motherboard and has power connectors for an ATX power supply.

### Key Features

The key features of this motherboard include:

#### LGA775 Socket Processor Support

- Supports the latest **Intel Pentium 4/Celeron D Series** processors with **Hyper-Threading Technology**
- Supports up to **800/533 MHz** Front-Side Bus

**Note:** **Hyper-Threading** technology enables the operating system into thinking it's hooked up to two processors, allowing two threads to be run in parallel, both on separate 'logical' processors within the same physical processor.

#### Chipset

There are **Intel 865GV Northbridge** and **Intel I/O Controller Hub 5 (ICH5)** in the chipsets in accordance with an innovative and scalable architecture with proven reliability and performance.

- Host Interface Support
  - One Intel Pentium 4 processor with 512-KB L2 cache on 0.13 micron process / Pentium 4 processor on 90 nm process

## Motherboard User's Guide

---

- Hyper-Threading Technology
- System Memory Controller Support
  - Dual-channel (128 bits wide) DDR memory interface
  - Single-channel (64 bits wide) operation supported
  - Up to 4 GB system memory
  - Supports DDR266, DDR333, DDR400 DIMM modules
- AGP Interface Support
  - AGP 3.0 with 4X / 8X AGP data transfers and 4X / 8X fast writes, respectively
- PCI Bus Interface
  - Supports PCI Revision 2.3 Specification at 33 MHz
- Integrated LAN Controller
  - Wi-Fi 2.0 and IEEE 802.3 Compliant
  - 10/100 Mbit/sec Ethernet Support
- Integrated Serial ATA Host Controllers
  - Independent DMA operation on two ports
  - Data transfer rates up to 1.5 Gb/s (150 MB/s)
- Integrated IDE Controller
  - Ultra ATA/100/66/33, BMIDE and PIO modes
- USB 2.0
  - Includes 4 UHCI Host Controllers, increasing the number of external ports to eight
- AC-Link for Audio and Telephony Codecs
  - Support for 3 AC'97 2.3 codecs—533 MT/s (133 MHz) FSB and 800 MT/s (200 MHz) FSB
  - Supports Hyper-Threading Technology (HT Technology)
  - FSB Dynamic Bus Inversion (DBI)

### Memory Support

- Three 184-pin 2.5V DIMM sockets for DDR SDRAM **DDR400**/333/266 memory modules
- Maximum installed memory is 3GB

### Expansion Slots

- One AGP Ultra slot
- Three 32-bit PCI slots
- One CNR slot

### Onboard IDE channels

- Two IDE Channels supporting ATA-33, ATA-66, ATA-100
- Supports PIO (Programmable Input/Output) and DMA (Direct Memory Access) modes
- Supports IDE Ultra DMA bus mastering with transfer rates of **100**/66/33 MB/sec

### Serial ATA

- Four Serial ATA Connectors
- Transfer rate exceeding best ATA (~150 MB/s) with scalability to higher rates
- Low pin count for both host and devices

### AC'97 Audio Codec

- Compliant with AC'97 2.3 specification
- Front-Out, Surround-Out, MIC-In and LINE-In Jack Sensing
- Three analog line-level stereo inputs with 5-bit volume control: LINE\_IN, CD, AUX
- Two analog line-level mono input
- Standard 48-Pin LQFP

### Onboard I/O Ports

- Two PS/2 ports for mouse and keyboard
- One serial port
- One parallel port
- One VGA port
- One LAN port (optional)
- Four back-panel USB2.0 ports
- Audio jacks for microphone, line-in and line-out

### Fast Ethernet LAN (optional)

- 10 Mb/s and 100 Mb/s operation
- Integrated Fast Ethernet MAC, physical chip, and transceiver onto a single chip
- Supports 10Mb/s and 100Mb/s N-way auto-negotiation
- Support ACPI power management
- Full Duplex Flow Control (IEEE 802.3x) and Half/Full duplex capability

### USB 2.0

- Compliant with Universal Serial Bus Specification Revision 2.0
- Compliant with Intel's Enhanced Host Controller Interface Specification Revision 1.0
- Compliant with Universal Host Controller Interface Specification Revision 1.1
- PCI multi-function device consists of two **UHCI Host Controller** cores for full-/low-speed signaling and one **EHCI Host Controller** core for high-speed signaling
- Root hub consists 4 downstream facing ports with integrated physical layer transceivers shared by **UHCI** and **EHCI** Host Controller, up to eight functional ports
- Support PCI-Bus Power Management Interface Specification release 1.1
- Legacy support for all downstream facing ports

## Motherboard User's Guide

---

### BIOS Firmware

This motherboard uses AMI BIOS that enables users to configure many system features including the following:

- Power management
- Wake-up alarms
- CPU parameters and memory timing
- CPU and memory timing

The firmware can also be used to set parameters for different processor clock speeds.

### Dimensions

- Micro ATX form factor of 244 x 244 mm

**Note:** Hardware specifications and software items are subject to change without notification.

### Package Contents

Your motherboard package ships with the following items:

- ☐ The motherboard
- ☐ The User's Guide
- ☐ One diskette drive ribbon cable (optional)
- ☐ One IDE drive ribbon cable
- ☐ The Software support CD

### Optional Accessories

You can purchase the following optional accessories for this motherboard.

- ☐ The Extended USB module
- ☐ The CNR v.90 56K Fax/Modem card
- ☐ The Serial ATA cable
- ☐ The Serial ATA power cable

**Note:** You can purchase your own optional accessories from the third party, but please contact your local vendor on any issues of the specification and compatibility.

## Chapter 2 Motherboard Installation

To install this motherboard in a system, please follow these instructions in this chapter:


- ☐ Identify the motherboard components
- ☐ Install a CPU
- ☐ Install one or more system memory modules
- ☐ Make sure all jumpers and switches are set correctly
- ☐ Install this motherboard in a system chassis (case)
- ☐ Connect any extension brackets or cables to headers/connectors on the motherboard
- ☐ Install peripheral devices and make the appropriate connections to headers/connectors on the motherboard

**Note:**

- 1 Before installing this motherboard, make sure jumper JP1 is under Normal setting. See this chapter for information about locating JP1 and the setting options.
- 2 Never connect power to the system during installation; otherwise, it may damage the motherboard.



### Motherboard Components

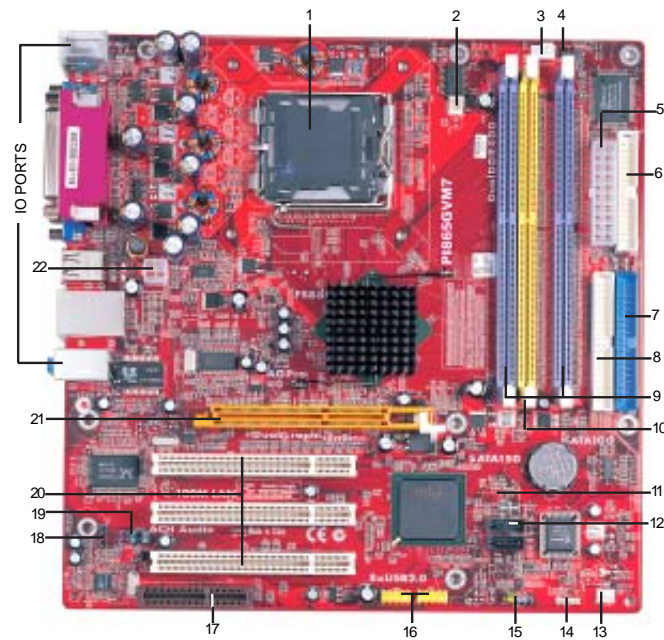

---

## Chapter 2: Motherboard Installation

---

ITEM	LABEL	COMPONENTS
1	CPU Socket	LGA775 Socket for Intel Pentium 4/ Celeron D CPUs
2	PWRFAN	Power fan connector
3	CPUFAN	CPU Fan connector(4PIN)
4	IR1	Infrared header
5	ATX2	Standard 20-Pin ATX Power connector
6	FDD1	Floppy Disk Drive connector
7	IDE1	Primary IDE connector
8	IDE2	Secondary IDE connector
9	DIMM1 DIMM3	184-pin DDR SDRAM sockets (Support Dual-Channel DDR400)
10	DIMM2	184-pin DDR SDRAM sockets
11	JP1	Clear CMOS jumper
12	SATA1/2	Serial ATA connectors
13	SYSFAN	System Fan connector
14	SPK1	Speaker header
15	PANEL1	Front Panel Switch/LED header
16	USB2/3	Front Panel USB headers
17	CNR1	CNR slot
18	CD1	Analog Audio Input header
19	AUDIO2	Front Panel Audio header
20	PCI 1-3	32-bit PCI slots
21	AGPRO	AGP Ultra slot *
22	ATX3	Standard 4-Pin ATX Power connector


\* Please see Page 19 for more details about AGP Ultra slot.

## Motherboard User's Guide

---

### I/O Ports

The illustration below shows a side view of the built-in I/O ports on the motherboard.

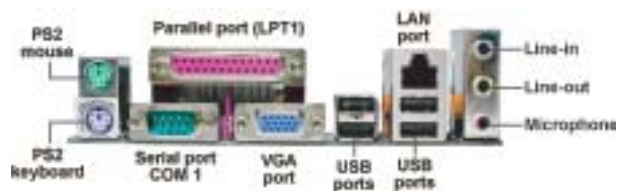


<b>PS/2 Mouse</b>	Use the upper PS/2 port to connect a PS/2 pointing device.
<b>PS/2 Keyboard</b>	Use the lower PS/2 port to connect a PS/2 keyboard.
<b>Parallel Port (LPT1)</b>	Use the Parallel port to connect printers or other parallel communications devices.
<b>COM1</b>	Use the COM port to connect serial devices such as mice or fax/modems. COM1 is identified by the system as COM1.
<b>VGA</b>	Use the VGA port to connect VGA devices.
<b>LAN Port (optional)</b>	Connect an RJ-45 jack to the LAN port to connect your computer to the Network.
<b>USB Ports</b>	Use the USB ports to connect USB devices.
<b>Audio Ports</b>	Use these three audio jacks to connect audio devices. The first jack is for stereo Line-In signal, the second jack for stereo Line-Out signal, and the third jack for Microphone.

### Installing the Processor

This motherboard has a **LGA775** socket for the latest **Intel Pentium 4/Celeron D** processors. When choosing a processor, consider the performance requirements of the system. Performance is based on the processor design, the clock speed and system bus frequency of the processor, and the quantity of internal cache memory and external cache memory.

#### CPU Installation Procedure

Follow these instructions to install the CPU:

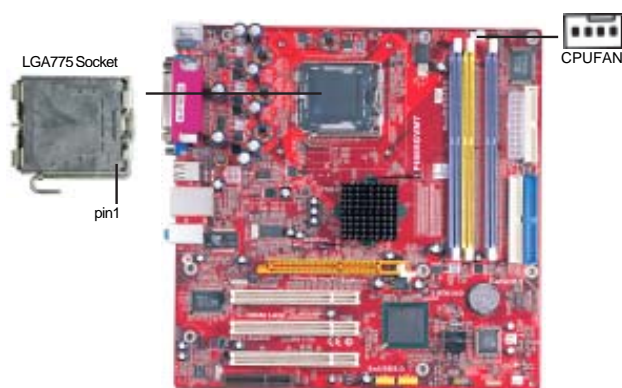

- A. Unload the cap
  - Use thumb & forefinger to hold the lifting tab of the cap.
  - Lift the cap up and remove the cap completely from the socket.
- B. Open the load plate
  - Use thumb & forefinger to hold the hook of the lever, pushing down and pulling aside unlock it.
  - Lift up the lever.
  - Use thumb to open the load plate. Be careful not to touch the contacts.



## Motherboard User's Guide

---

- C. Install the CPU on the socket
- Orientate CPU package to the socket. Make sure you match triangle marker to pin 1 location.
- D. Close the load plate
- Slightly push down the load plate onto the tongue side, and hook the lever.
  - CPU is locked completely.
- E. Apply thermal grease on top of the CPU.
- F. Fasten the cooling fan supporting base onto the CPU socket on the motherboard.
- G. Make sure the CPU fan is plugged to the CPU fan connector. Please refer to the CPU cooling fan user's manual for more detail installation procedure.




**Note1:** To achieve better airflow rates and heat dissipation, we suggest that you use a high quality fan with 3800 rpm at least. CPU fan and heatsink installation procedures may vary with the type of CPU fan/heatsink supplied. The form and size of fan/heatsink may also vary.

**Note2:** The fan connector supports the CPU cooling fan of 1.1A~2.2A (26.4W max.) at +12V.

## Installing Memory Modules

This motherboard accommodates three 184-pin 2.5V DIMM sockets (Dual Inline Memory Module) for unbuffered **DDR400**/333/266 memory modules (Double Data Rate SDRAM), and maximum 3.0 GB installed memory. DDR SDRAM is a type of SDRAM that supports data transfers on both edges of each clock cycle (the rising and falling edges), effectively doubling the memory chip's data throughput.

This motherboard provides the Dual Channel Technology; when activating it, the bandwidth of memory bus will be doubled to 6.4 GB/s and Frequency 200 MHz (Channel 1: DIMM1+DIMM3 or Channel 2: DIMM2+DIMM3).

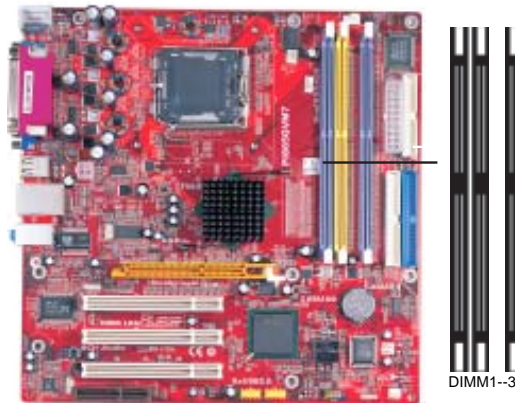

### Memory Module Installation Procedure


These modules can be installed with up to 3 GB system memory. Refer to the following to install the memory module.

1. Push down the latches on both sides of the DIMM socket.
2. Align the memory module with the socket. There is a notch on the DIMM socket that you can install the DIMM module in the correct direction. Match the cutout on the DIMM module with the notch on the DIMM socket.
3. Install the DIMM module into the socket and press it firmly down until it is seated correctly. The socket latches are levered upwards and latch on to the edges of the DIMM.
4. Install any remaining DIMM modules.



### Jumper Settings

Connecting two pins with a jumper cap is SHORT; removing a jumper cap from these pins, OPEN.

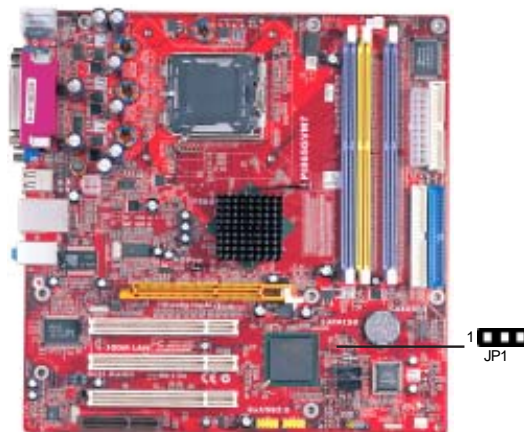

#### JP1: Clear CMOS Jumper

Use this jumper to clear the contents of the CMOS memory. You may need to clear the CMOS memory if the settings in the Setup Utility are incorrect and prevent your motherboard from operating. To clear the CMOS memory, disconnect all the power cables from the motherboard and then move the jumper cap into the CLEAR setting for a few seconds.

Function	Jumper
Normal	Short Pins 1-2
Clear CMOS	Short Pins 2-3

**Note:** To avoid the system instability after clearing CMOS, we recommend users to enter the main BIOS setting page to "Load Optimal De-faults" and then "Save Changes and Exit".

### Install the Motherboard

Install the motherboard in a system chassis (case). The board is a Micro ATX size motherboard. You can install this motherboard in an ATX case. Make sure your case has an I/O cover plate matching the ports on this motherboard.

Install the motherboard in a case. Follow the case manufacturer's instructions to use the hardware and internal mounting points on the chassis.



Connect the power connector from the power supply to the **ATX2** connector on the motherboard. The **ATX3** is a +12V connector for CPU Vcore power.

If there is a cooling fan installed in the system chassis, connect the cable from the cooling fan to the **SYSFAN** fan power connector on the motherboard.

Connect the power fan connector to **PWRFAN**.

Connect the case switches and indicator LEDs to the **PANEL1** header. Please refer to the following list of the PANEL1 pin assignments.

Pin	Signal	Pin	Signal
1	HD_LED_P(+)	2	FP PWR/SLP(+)
3	HD_LED_N(-)	4	FP PWR/SLP(-)
5	RESET_SW_N(-)	6	POWER_SW_P(+)
7	RESET_SW_P(+)	8	POWER_SW_N(-)
9	RSVD_DNU	10	KEY



## Motherboard User's Guide

### Connecting Optional Devices

Refer to the following for information on connecting the motherboard's optional devices:



#### AUDIO2: Front Panel Audio Header

This header allows the user to install auxiliary front-oriented microphone and line-out ports for easier access.

Pin	Signal	Pin	Signal
1	AUD_MIC	2	AUD_GND
3	AUD_MIC_BIAS	4	AUD_VCC
5	AUD_FPOUT_R	6	AUD_RET_R
7	HP_ON	8	KEY
9	AUD_FPOUT_L	10	AUD_RET_L

#### USB2/USB3: Front Panel USB Header

The motherboard has USB ports installed on the rear edge I/O port array. Additionally, some computer cases have USB ports at the front of the case. If you have this kind of case, use auxiliary USB headers USB2/USB3 to connect the front-mounted ports to the motherboard.

## Chapter 2: Motherboard Installation

Here is a list of headers USB2/USB3 pin assignments.

Pin	Signal	Pin	Signal
1	VERG_FP_USBPWR0	2	VERG_FP_USBPWR0
3	USB_FP_P0(-)	4	USB_FP_P1(-)
5	USB_FP_P0(+)	6	USB_FP_P1(+)
7	GROUND	8	GROUND
9	KEY	10	USB_FP_OC0

- 1 Locate the USB2/USB3 header on the motherboard.
- 2 Plug the bracket cable onto the USB2/USB3 header.
- 3 Remove a slot cover from one of the expansion slots on the system chassis. Install an extension bracket in the opening. Secure the extension bracket to the chassis with a screw.

### SPK1: Speaker Header

Connect the cable from the PC speaker to the SPK1 header on the motherboard.

Pin	Signal
1	SPKR
2	NC
3	GND
4	+5V

### IR1: Infrared Header

The infrared port allows the wireless exchange of information between your computer and similarly equipped devices such as printers, laptops, Personal Digital Assistants (PDAs), and other computers.

Pin	Signal	Pin	Signal
1	NC	2	KEY
3	+5V	4	GND
5	IRTX	6	IRRX


- 1 Locate the infrared port-**IR1** header on the motherboard.
- 2 If you are adding an infrared port, connect the ribbon cable from the port to the IR1 header and then secure the port to an appropriate place in your system chassis.

## Motherboard User's Guide

---

### Install Other Devices

Install and connect any other devices in the system following the steps below.

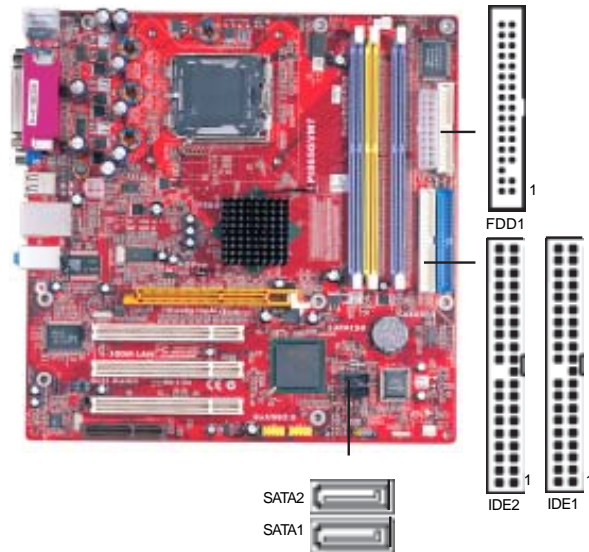

#### Floppy Disk Drive

The motherboard ships with a floppy disk drive cable that can support one or two drives. Drives can be 3.5" or 5.25" wide, with capacities of 360K, 720K, 1.2MB, 1.44MB, or 2.88MB.

Install your drives and connect power from the system power supply. Use the cable provided to connect the drives to the floppy disk drive connector **FDD1**.

#### IDE Devices

IDE devices include hard disk drives, high-density diskette drives, and CD-ROM or DVD-ROM drives, among others.

The motherboard ships with an IDE cable that can support one or two IDE devices. **IDE1** can support up to 2 IDE devices, data transporting in ATA-33/66/100 mode.

#### Serial ATA Devices

The **Serial ATA (Advanced Technology Attachment)** is the standard interface for the IDE hard drives, which is designed to overcome the design limitations

## Chapter 2: Motherboard Installation

while enabling the storage interface to scale with the growing media rate demands of PC platforms. It provides you a faster transfer rate of **150 MB/s**. If you have installed a Serial ATA hard drive, you can connect the Serial ATA cables to the Serial ATA hard drive or the connector on the motherboard.

On the motherboard, locate the Serial ATA connectors **SATA1-2**, which support new Serial ATA devices for the highest data transfer rates, simpler disk drive cabling and easier PC assembly.

It eliminates limitations of the current Parallel ATA interface, but maintains register compatibility and software compatibility with Parallel ATA.

### Analog Audio Input Header

If you have installed a CD-ROM drive or DVD-ROM drive, you can connect the drive audio cable to the onboard sound system.



When you first start up your system, the BIOS should automatically detect your CD-ROM/DVD drive. If it doesn't, enter the Setup Utility and configure the CD-ROM/DVD drive that you have installed. On the motherboard, locate the 4-pin header **CD1**.


Pin	Signal
1	CD IN L
2	GND
3	GND
4	CD IN R

## Motherboard User's Guide

---

### Expansion Slots

This motherboard has one CNR, one AGP Ultra and three 32-bit PCI slots.

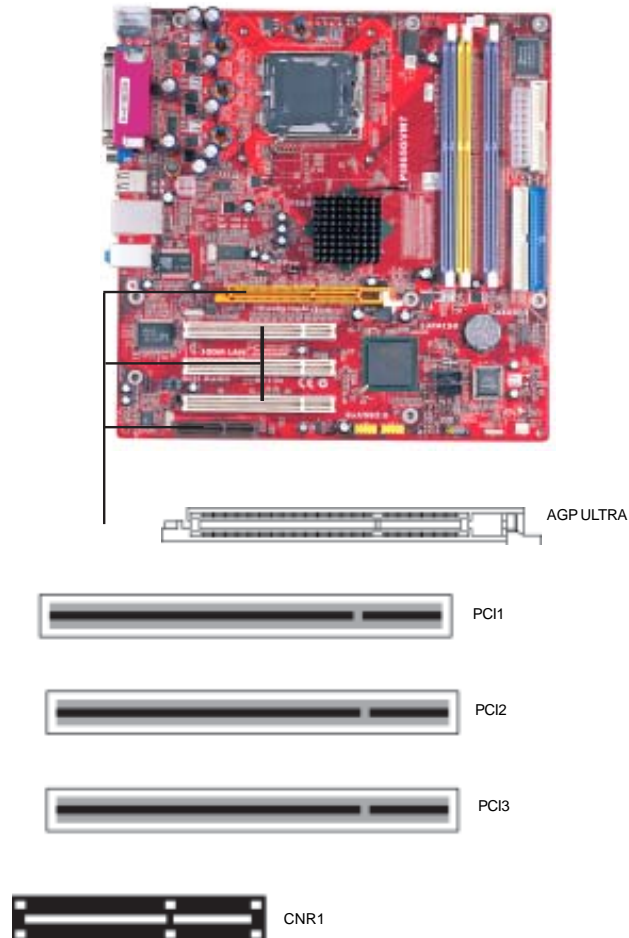

## Chapter 2: Motherboard Installation

---

Follow the steps below to install an CNR/AGP Ultra/PCI expansion card.

- 1 Locate the CNR, AGPro and PCI slots on the motherboard.
- 2 Remove the blanking plate of the slot from the system chassis.
- 3 Install the edge connector of the expansion card into the slot. Ensure the edge connector is correctly seated in the slot.
- 4 Secure the metal bracket of the card to the system chassis with a screw.



### **AGP Ultra Slot (AGP ULTRA)**

The AGP Ultra slot is used to install AGP graphics card that emulates the AGP function. In order to get better performance and compatibility on our special design AGP Ultra slot, we recommend you should use one of the AGP graphics cards that have been tested by our company. Please refer to the “VGA Card Support List for AGP Ultra Slot” on page 20.

## VGA Card Support List for AGP Ultra Slot:


VENDOR	BUS	CHIPSET	MANUFACTURE
ATI	4X	Radeon 8500	ATI RADEON 8500 DDR
		Radeon 9000 PRO	Gigabyte GV-R9000PRO
	8X	Radeon 9200	ECS R9200LE / 64M
		Radeon 9200	ECS R9200LE / 128M
		Radeon 9250	ECS R9250-128T
		Radeon 9500	Power Color ATI 9500
nVIDIA	4X	RIVA TNT2 Model 64	WINFAST S325 TNT M64
		GeForce 256	Creative CT6940
		GeForce 256 DDR	ASUS V6800 DDR
		GeForce 2 GTS	GIGABYTE GV-GF2010D
		GeForce 2 GTS	ELSA GLADIAC GTS DDR PRO/64M
		GeForce 2 MX	ASUS AGP-V7100
		GeForce 2 MX	ELSA Gladiac MX
		GeForce 2 MX	Triplex Mohock
		GeForce 2 Ultra	WINFAST GeForce 2 Ultra
		GeForce 2 MX200	Triplex-MX2200
		GeForce 2 MX400	ELSA GLADIAC 511
		GeForce 3	ELSA GLADIAC 920
		GeForce 3	ASUS V8200
		GeForce 3 Ti500	ASUS V8200
		GeForce 4 MX420	WINFAST A170TH SDR
		GeForce 4 MX440	ASUS V8170DDR
		GeForce 4 Ti4200	WINFAST A250TD/64M
		GeForce 4 Ti4400	ELSA 725DVI
		GeForce 4 Ti4600	ELSA 925ViVo
	8X	GeForce 4 Ti4200	ASUS V9280TD
		GeForce 4 MX440	ASUS V9180VS
		GeForce 4 MX4000	WinFast A180B
		GeForce FX5200	ASUS V9520 Magic
		GeForce FX5600	ELSA FX 732
		GeForce FX5700	ELSA FX 736
		GeForce FX5800	MSI FX5800TD
		GeForce FX5900Ultra	MSI FX5900Ultra
SIS	8X	Xabre 200	ECS AG200E4-D32
		Xabre 200	ECS AG200T8_D64
		Xabre 400	ECS AG400T8_D64
		Xabre 400	ECS-MM AG400T8_D64

**Note:** Please visit our website for the updated AGP graphics card support list : <http://www.mercury-pc.com/support.php>

## Chapter 2: Motherboard Installation

Once the AGP card is completely installed under Windows 2000 or Windows XP, the sign like this “? Video Controller” will pop up below the “Device Manager” as the following picture shows.

It is normal to see the sign as the onboard VGA card is “Disabled”. Therefore, users don’t have to worry about this point.

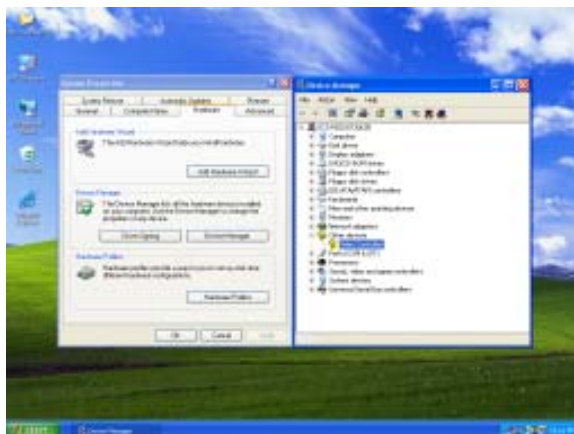

**Note:** To install the system with an add-on AGP card, you must make sure to install the driver of add-on AGP card before you install the onboard VGA driver. If the onboard VGA driver has already been installed before you install the add-on AGP card, the system will set the onboard VGA as the primary graphics adapter automatically. In this situation, if you want to install the add-on AGP card, you need to remove the onboard VGA driver first, and then install the add-on AGP card and its driver.

### PCI1-3 Slots

You can install the 32-bit PCI interface expansion cards in the slots.

### CNR Slot

You can install CNR (Communications and Networking Riser) cards including LAN, Modem and Audio functions, in this slot.



## Motherboard User's Guide

---

### Dual Monitor

In order to enable "Dual Monitor" Function, users must have "**Two Monitors**", "**Two Graphics Devices**" (one is for AGP graphics card, and the other for onboard VGA) and Windows 2000 or Windows XP that supports the Dual Monitor Function.

**Note:** For the Dual Monitor Function, this motherboard only supports "Extended" mode, not "Clone" mode.

Users must follow the "Dual Monitor Installation" below or visit our website at : <http://www.mercury-pc.com/support.php> for detailed information.

#### Dual Monitor Installation (For Window XP)

If the onboard VGA is first installed, and you would like to use the add-on AGP card. Please follow the installation steps 1-6. Users may go to step 4 directly if the add-on AGP card is installed first and then turned on the onboard VGA devices for "secondary display".

##### Step 1: Remove the Onboard VGA Driver

- Go to "Control Panel"
- Choose "Add or Remove Programs"
- Choose "Intel® Extreme Graphics Driver"
- Click "Remove"
- Shut down the computer

##### Step 2: Install the ADD-on AGP Card

- Shut down the system
- Install the add-on AGP card in the AGP Ultra slot
- Turn on the computer

**Note:** When you turn on the system, windows might report Found New Hardware Wizard, "Video Controller (VGA Compatible)" or "Video Controller". When you see the Found New Hardware Wizard dialogue box, DO NOT insert any disk in your CD/DVD-ROM before clicking on the "Next" button. The Windows Auto-search will not be finished till it can't search the related driver.

##### Step 3: Install the Add-on AGP Card Driver

- Install the add-on AGP card driver
- Restart the computer

##### Step 4: Install the Onboard VGA Driver

- Install the onboard VGA driver from our support CD to utilize Dual Monitor Function. Here is the Driver Path:  
**CD\_ROM:\VGA\Intel845g\WIN2K&XP\Graphics\Setup.exe**
- Restart the computer

**Note:** If the add-on AGP card driver and onboard VGA drivers are installed, the dual-monitor display will be enabled. As soon as it is enabled, follow the instructions to view the status of the dual-monitor display or adjust the parameters of the two monitors.

### Step 5: Right click the desktop. Select “Properties”

See the picture below:



### Step 6: Select “Display Properties”

Click “Settings”

Then the parameters of the two monitors can be adjusted.

### Dual Monitor Installation (For Windows 2000)

If the onboard VGA is first installed, and you would like to use the add-on AGP card. Please follow the installation steps 1--6. Users may go to step 4 directly if the add-on AGP card is installed first and then turned on the onboard VGA devices for “secondary display”.

#### Step 1: Install the Add-on AGP Card

Shut down the system

Install your add-on AGP card in the AGP Ultra slot

Turn on the computer

#### Step 2: Install the Add-on AGP Card Driver

Install the add-on AGP card driver

Restart the computer

**Note:** Windows might report Found New Hardware Wizard once the system is turned on. When you see the “dialogue box” of the Found New Hardware Wizard, please click on “Cancel” and DO NOT install the onboard VGA driver.

## Motherboard User's Guide

---

### Step 3: Remove the Onboard VGA Driver

- Go to "Control Panel"
- Choose "Add or Remove Programs"
- Choose "Intel® Extreme Graphics Driver"
- Click "Remove" and Restart the computer

**Note:** When you turn on the system, window might report Found New Hardware Wizard, "Video Controller (VGA Compatible)" or "Video Controller". When you see the Found New Hardware Wizard dialogue box, DO NOT insert any disk in your CD/DVD-ROM before clicking on the "Next" button. The Windows Auto-search will not be finished till it can't search the related driver.

### Step 4: Install the Onboard VGA Driver

- Install the onboard VGA driver from our support CD to utilize Dual Monitor Function. Here is the Driver Path:


**CD-ROM:** \VGA\Intel845g\WIN2K&XP\Graphics\Setup.exe

- Restart the computer

**Note:** If the add-on AGP card driver and onboard VGA drivers are installed, the dual-monitor display will be enabled. As soon as it is enabled, follow the instructions to view the status of the dual-monitor display or adjust the parameters of the two monitors.

### Step 5: Right click the desktop. Select "Properties"

- See the picture below.

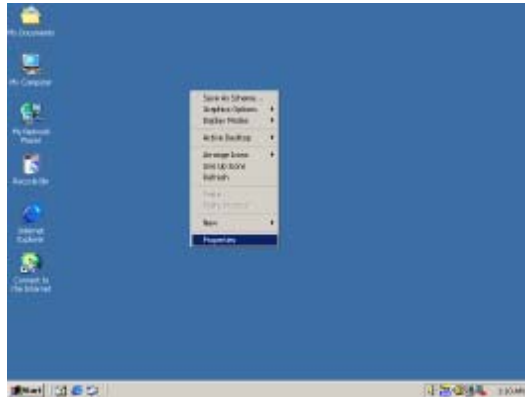

### Step 6: Select "Display Properties"

- Click "Settings"

- Then the parameters of the two monitors can be adjusted.

## Chapter 3 BIOS Setup Utility

### Introduction

The BIOS Setup Utility records settings and information of your computer, such as date and time, the type of hardware installed, and various configuration settings. Your computer applies the information to initialize all the components when booting up and basic functions of coordination between system components.

If the Setup Utility configuration is incorrect, it may cause the system to malfunction. It can even stop your computer booting properly. If it happens, you can use the clear CMOS jumper to clear the CMOS memory which has stored the configuration information; or you can hold down the **Page Up** key while rebooting your computer. Holding down the **Page Up** key also clears the setup information.

You can run the setup utility and manually change the configuration. You might need to do this to configure some hardware installed in or connected to the motherboard, such as the CPU, system memory, disk drives, etc.

### Running the Setup Utility

Every time you start your computer, a message appears on the screen before the operating system loading that prompts you to “*Hit <DEL> if you want to run SETUP*”. Whenever you see this message, press the **Delete** key, and the Main menu page of the Setup Utility appears on your monitor. If you manually clear CMOS, you need to press the **F1** key that enters the Main menu page of the Setup Utility.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc	
<ul style="list-style-type: none"><li>▶ Standard CMOS Setup</li><li>▶ Advanced Setup</li><li>▶ Features Setup</li><li>▶ Power Management Setup</li><li>▶ PCI / Plug and Play Setup</li><li>▶ BIOS Security Features</li></ul>	<ul style="list-style-type: none"><li>▶ CPU PnP Setup</li><li>▶ Hardware Monitor</li><li>Load Optimal Defaults</li><li>Save Changes and Exit</li><li>Discard Changes and Exit</li></ul>
← → : Move   +/=: Value   Enter: Select   F1: General Help   Esc: Exit F9: Optimized Settings   F10: Save	
Standards CMOS setup for changing time, date, hard disk type, etc. V02.56 (C) 1985-2004, American Megatrends, Inc.	

## Motherboard User's Guide

You can use cursor arrow keys to highlight anyone of options on the main menu page. Press **Enter** to select the highlighted option. Press the **Escape** key to leave the setup utility. Press +/- to modify the selected field's values.

Some options on the main menu page lead to tables of items with installed values that you can use cursor arrow keys to highlight one item, and press + and - keys to cycle through alternative values of that item. The other options on the main menu page lead to dialog boxes requiring your answer OK or Cancel by selecting **[OK]** or **[Cancel]**.

If you have already changed the setup utility, press **F10** to save those changes and exit the utility. Press **F1** to display a screen describing all key functions. Press **F9** to install the setup utility with a set of default values.

### Standard CMOS Setup Page

This page displays a table of items defining basic information about your system.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. Standard CMOS Setup		
System Time	00:01:25	Help Item
System Date	Thu 05/06/2004	
Primary IDE Master	Not Detected	User [Enter], [TAB] or [SHIFT-TAB] to select a field. Use [+] or [-] to configure system time.
Primary IDE Slave	Not Detected	
Secondary IDE Master	Not Detected	
Secondary IDE Slave	Not Detected	
S-ATA0 Master	Not Detected	
S-ATA1 Slave	Not Detected	
Floppy A	1.44 MB 3 1/2"	
Floppy B	Disabled	
<div>⏮ ⏪ ⏩ ⏭ ⏮ ⏪ ⏩ ⏭ Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults</div>		

### System Date & System Time

These items set up system date and time.

### Primary IDE Master/Primary IDE Slave/Secondary IDE Master/Secondary IDE Slave/S-ATA0/1


Your computer has one IDE channel and each channel can be installed with one or two devices (Master and Slave). In addition, this motherboard supports four SATA channels and each channel allows one SATA device to be installed. Use these items to configure each device on the IDE channel.

### Floppy A/B

These items set up size and capacity of the floppy diskette drive installed in the system.

## Advanced Setup Page

This page sets up more advanced information about your system. Handle this page with caution. Any changes can affect the operation of your computer.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. Advanced Setup		
Share Memory Size	8 MB	Help Item  Allows BIOS to skip certain tests while booting. This will decrease the time needed to boot the system.
Quick Boot	Enabled	
1st Boot Device	HDD:SS-ST3120026AS	
2nd Boot Device	CD/DVD:3M-Pioneer D	
3rd Boot Device	1st Floppy Drive	
Try Other Boot Device	Yes	
Bootup Num-Lock	On	
Graphic Win Size	64 MB	
Configure DRAM Timing by SPD	Enabled	
Hyper Threading Function	Enabled	
Execute Disable Bit	Disabled	
Auto Detect DIMM/PCI Clk	Enabled	
Spread Spectrum	Disabled	
Vdimm Voltage Control	2.65V	
CPU TM Function	TM1	
Max CPUID Value Limit	Disabled	
<div> : Move   Enter: Select   +/-: Value   F10: Save   Esc: Exit F1: General Help   F9: Optimized Defaults</div>		

### Share Memory Size

This item lets you allocate a portion of the main memory for the onboard VGA display application with these options of Disabled, 1 MB and 8 MB

### Quick Boot

If you enable this item, the system starts up more quickly by elimination of some of the power on test routines.

### 1st Boot Device/2nd Boot Device/3rd Boot Device

Use these items to determine the device order the computer uses to look for an operating system to load at start-up time.

### Try Other Boot Device

If you enable this item, the system will also search for other boot devices if it fails to find an operating system from the first two locations.

### BootUp Num-Lock

This item determines if the Num Lock key is active or inactive at system start-up time.

### Graphic Win Size

This item defines the size of aperture if you use a graphic adapter.

### Configure DRAM Timing by

This item allows you to enable or disable the DRAM timing defined by the Serial Presence Detect electrical.

### **Hyper Threading Technology**

If your P4 CPU is not HT CPU, this item will be hidden.

If your P4 CPU is HT CPU, BIOS will show this item. You can set "Disabled" or "Enabled" to control HT CPU support in O.S. Set "Enabled" to test HT CPU function.

### **Execute Disable Bit**

It allows the processor to classify areas in memory by where application code can execute and where it cannot. When a malicious worm attempts to insert code in the buffer, the processor disables code execution, preventing damage or worm propagation. Replacing older computers with Execute Disable Bit-enabled systems can halt worm attacks, reducing the need for virus related repairs.

### **Auto Detect DIMM/PCI Clk**

When this item is enabled, BIOS will disable the clock signal of free DIMM/PCI slots.

### **Spread Spectrum**

If you enable spread spectrum, it can significantly reduce the EMI (Electro-Magnetic interface) generated by the system.

### **Vdimm Voltage Control**

Use this item to adjust the voltage of DRAM memory.

### **CPU TM Function**

For some specific brands of CPU, you can use this item to control the CPU frequency and voltage according to its temperature.

### **Max CPUID Value Limit**

When this item is enabled, you can use Prescott CPU and LGA-775 CPU and there will be a normal NT4.0 installation; otherwise, the automatically restarting will occur while installing.

## Features Setup Page

This page sets up some parameters for peripheral devices connected to the system.

CMOS SETUP UTILITY - Copyright (C) 1985-2004, American Megatrends, Inc. Features Setup		
OnBoard Floppy Controller	Enabled	Help Item
Serial Port1 Address	3F8/IRQ4	Allows BIOS to Enable or Disable Floppy Controller.
OnBoard IR Port	Disabled	
Parallel Port Address	378	
Parallel Port Mode	ECP	
ECP Mode DMA Channel	DMA3	
Parallel Port IRQ	IRQ7	
OnBoard PCI IDE Controller	Both	
Audio Device	Enabled	
Ethernet Device	Enabled	
MODEM Device	Auto	
OnBoard USB Function	Enabled	
USB Function for DOS	Disabled	
USB 2.0 Controller	Enabled	
*****On-Chip Serial ATA Setting*****		
On-Chip Serial ATA	Enhanced Mode	
Serial ATA Port0/1 Mode	P0-3rd/P1-4th	
←→: Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults		

### OnBoard Floppy Controller

Use this item to enable or disable the onboard floppy disk drive interface.

### Serial Port1 Address

Use this item to enable or disable the onboard COM1/2 serial port, and to assign a port address.

### OnBoard IR Port

Use this item to enable or disable the onboard infrared port, and to assign a port address.

### Parallel Port Address

Use this item to enable or disable the onboard Parallel port, and to assign a port address.

### Parallel Port Mode

This item decides the parallel port mode. You can select Normal, Bi-Directional, EPP (Enhanced Parallel Port), or ECP (Extended Capabilities Port).

### ECP Mode DMA Channel

This item assigns a DMA channel to the parallel port. The options are DMA0, DMA1 and DMA3.

### Parallel Port IRQ

This item assigns either IRQ 5 or 7 to the parallel port.



### OnBoard PCI IDE Controller

Use this item to enable or disable either or both of the onboard Primary and Secondary IDE channels. There are four options: Disabled, Primary, Secondary and Both.

### Audio Device

This item enables or disables the AC'97 audio chip.

### Ethernet Device

This item enables or disables the onboard Ethernet LAN.

### MODEM Device

This item enables or disables the MC'97 modem chip.

### OnBoard USB Function

Enable this item if you plan to use the USB ports on this motherboard.

### USB Function For DOS

Enable this item if you plan to use the USB ports on this motherboard in a DOS environment.

### On-Chip Serial ATA


Use this item to disable or enable the S-ATA and IDE devices:

Option	Function
Disabled	Disabled S-ATA Controller
Enhanced Mode	Primary: 2 IDE Drives Secondary: 2 IDE Drives S-ATA: 2 S-ATA Drives
SATA Only	Only Support S-ATA Mode
Combine Mode	Primary: 2 IDE Drives S-ATA: 2 S-ATA Drives <i>Note: If you need to install Windows 98 or Windows ME, please select "Combine Mode".</i>

### Serial ATA Port0/1 Mode

Use this item to decide the sequence of the Serial ATA devices.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc.		
Power Management Setup		
ACPI Aware O/S	Yes	Help Item
Power Management	Enabled	
Suspend Mode	S1	Yes / No
Suspend Time Out	Disabled	ACPI support for
Resume on RTC Alarm	Disabled	Operating System.
LAN/Ring Power On	Disabled	Yes: If OS supports ACPI.
Keyboard Power On	Disabled	No: If OS does not support
		ACPI.

 : Move    Enter: Select    +/-: Value    F10: Save    Esc: Exit  
F1: General Help                      F9: Optimized Defaults

## Motherboard User's Guide

Ring, or traffic on the network adapter. You must use an ATX power supply in order to use this feature.

### Keyboard Power On

If you enable this item, the system can automatically resume by pressing any keys, power key, or typing in the password on the keyboard. You must use an ATX power supply in order to use this feature.

## PCI / Plug and Play Setup Page

This page sets up some parameters for devices installed on the PCI bus and those utilizing the system plug and play capability.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. PCI / Plug and Play Setup		
Primary Graphics Adapter	AGPro	Help Item
Allocate IRQ to PCI VGA	Yes	
PCI IDE BusMaster	Disabled	No: lets the BIOS configure all the devices in the system. YES: lets the operating system configure Plug and Play (PnP) devices not required for boot if your system has a Plug and Play operating system.
⬅➡: Move Enter: Select +/-: Value F10: Save Esc: Exit F1: General Help F9: Optimized Defaults		

### Primary Graphics Adapter

This item indicates if the primary graphics adapter uses the OnChip VGA, PCI or AGPro.

### Allocate IRQ to PCI VGA

If this item is enabled, an IRQ will be assigned to the PCI VGA graphics system. You set this value to No to free up an IRQ.

### PCI IDE BusMaster

This item enables or disabled the DMA under DOS mode. We recommend you to leave this item at the default value.

## BIOS Security Features Setup Page

This page helps you install or change a password.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. BIOS Security Features Setup	
<b>Security Settings</b> Supervisor Password : Not Installed Change Supervisor Password Password Check	<b>Help Item</b> Install or Change the password.
Press Enter <b>Setup</b>	
← → : Move   Enter: Select   +/-: Value   F10: Save   Esc: Exit F1: General Help   F9: Optimized Defaults	

### Supervisor Password

This item indicates whether a supervisor password has been set. If the password has been installed, *Installed* displays. If not, *Not Installed* displays.

### Change Supervisor Password

You can select this option and press <Enter> to access the sub menu. You can use the sub menu to change the supervisor password.

### Password Check

This item enables users to choose the time when the system will perform password check.

## CPU PnP Setup Page

This page helps you manually configure the mainboard for the CPU. The system will automatically detect the type of installed CPU and make the appropriate adjustments to the items on this page.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. CPU PnP Setup	
Manufacturer: Intel Ratio Status Locked <b>DRAM Frequency</b> Auto CPU Frequency 200MHz CPU Over-clocking Func. Disabled	<b>Help Item</b>
← → : Move   Enter: Select   +/-: Value   F10: Save   Esc: Exit F1: General Help   F9: Optimized Defaults	

## Motherboard User's Guide

### Manufacturer/Ratio Status

These items show the brand and Locked/Unlocked ratio status of the CPU installed in your system.

### DRAM Frequency

This item shows the frequency of the DRAM in your system.

### CPU Frequency

This item shows the frequency of the CPU installed in your system.

### CPU Over-clocking Func.

This item decides the CPU over-clocking function installed in your system. If the over-clocking fails, please turn off the system power. And then, hold the PageUp key (similar to the Clear CMOS function) and turn on the power, the BIOS will recover the safe default.

## Hardware Monitor Page

This page sets up some parameters for the hardware monitoring function of this motherboard.

CMOS SETUP UTILITY – Copyright (C) 1985-2004, American Megatrends, Inc. Hardware Monitor Setup		
-- System Hardware Monitor--		Help Item
Vcore	: 1.363 V	
Vlvd	: 1.677 V	
VCC5V	: 4.985 V	
SYSTEM FAN Speed	: 2463 RPM	
CPU FAN Speed	: 5192 RPM	
POWER FAN Speed	: 0 RPM	
System Temperature	: 45°C/113°F	
CPU Temperature	: 47°C/116°F	
⬅➡⬅➡ : Move   Enter: Select   +/-: Value   F10: Save   Esc: Exit F1: General Help                      F9: Optimized Defaults		

### CPU/System Temperature

These items display CPU and system temperature measurement.

### FANs & Voltage Measurements

These items indicate cooling fan speeds in RPM and the various system voltage measurements.

### Load Optimal Defaults

If you select this item and press <Enter> a dialog box appears. If you select **[OK]**, and then press <Enter>, the Setup Utility loads a set of fail-safe default values. These default values are not very demanding and they should allow your system to function with most kinds of hardware and memory chips.

### Save Changes and Exit

Highlight this item and press <Enter> to save the changes that you have made in the Setup Utility configuration. When the Save Changes and Exit dialog box appears, select [OK] to save and exit, or [Cancel] to return to the main menu.

### Discard Changes and Exit

Highlight this item and press <Enter> to discard any changes that you have made in the Setup Utility and exit the Setup Utility. When the Discard Changes and Exit dialog box appears, select [OK] to discard changes and exit, or [Cancel] to return to the main menu.

**Note:** If you have made settings that you do not want to save, use the "Discard Changes and Exit" item and select [OK] to discard any changes you have made.

## Chapter 4 Software & Applications

### Introduction

This chapter describes the contents of the support CD-ROM that comes with the motherboard package.

The support CD-ROM contains all useful software, necessary drivers and utility programs to properly run our products. More program information is available in a README file, located in the same directory as the software.

To run the support CD, simply insert the CD into your CD-ROM drive. An Auto Setup screen automatically pops out, and then you can go on the auto-installing or manual installation depending on your operating system.

If your operating system is Windows 2000/XP, it will automatically install all the drivers and utilities for your motherboard; if Windows NT or manual installation, please follow the instructions described as the Installing under Windows NT or Manual Installation section.

### Installing Support Software

- 1 Insert the support CD-ROM disc in the CD-ROM drive.
- 2 When you insert the CD-ROM disc in the system CD-ROM drive, the CD automatically displays an Auto Setup screen.
- 3 The screen displays three buttons of **Setup**, **Browse CD** and **Exit** on the right side, and three others **Setup**, **Application** and **ReadMe** at the bottom. Please see the following illustration.



The **Setup** button runs the software auto-installing program as explained in next section.

The **Browse CD** button is a standard Windows command that you can check the contents of the disc with the Windows 98 file browsing interface.

The **Exit** button closes the Auto Setup window. To run the program again, reinsert the CD-ROM disc in the drive; or click the CD-ROM driver from the Windows Explorer, and click the Setup icon.

The **Application** button brings up a software menu. It shows the bundled software that this mainboard supports.

The **ReadMe** brings you to the Install Path where you can find out path names of software driver.


### Auto-Installing under Windows 2000/XP

If you are under Windows 2000/XP, please click the **Setup** button to run the software auto-installing program while the Auto Setup screen pops out after inserting the support CD-ROM:

- 1 The installation program loads and displays the following screen. Click the **Next** button.



- 2 Select the items that you want to setup by clicking on it (the default options are recommended). Click the **Next** button to proceed.

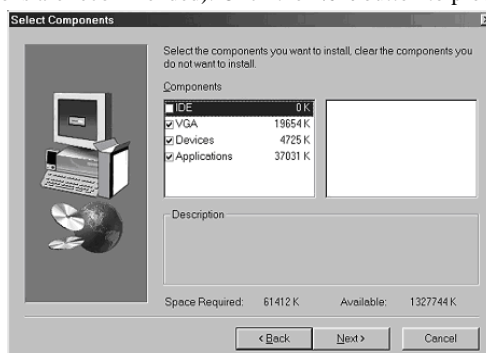



- 3 The support software will automatically install.

Once any of the installation procedures start, software is automatically installed in sequence. You need to follow the onscreen instructions, confirm commands and allow the computer to restart as few times as needed to complete installing whatever software you selected. When the process is finished, all the support software will be installed and start working.

### Installing under Windows NT or Manual Installation

If you are under Windows NT, the auto-installing program doesn't work out; or you have to do the manual installation, please follow this procedure while the Auto Setup screen pops out after inserting the support CD-ROM:

- 1 Click the **ReadMe** to bring up a screen, and then click the Install Path at the bottom of the screen.
- 2 Find out your mainboard model name and click on it to obtain its correct driver directory.
- 3 Install each software in accordance with the corresponding driver path.


### Bundled Software Installation

All bundled software available on the CD-ROM is for users' convenience. You can install bundled software as follows:

- 1 Click the **Application** button while the Auto Setup screen pops out after inserting the support CD-ROM.
- 2 A software menu appears. Click the software you want to install.
- 3 Follow onscreen instructions to install the software program step by step until finished.

### Hyper-Threading CPU

While you are in Windows Task Manager, please push down ctrl+Alt Del keys. A dual CPU appears in the CPU Usage History&Device Manager under WinXP.

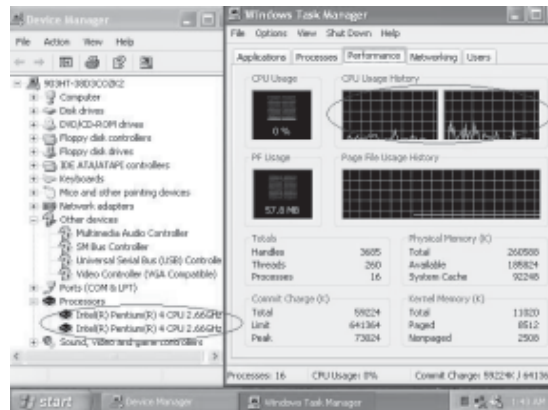

**Note:** Hyper-Threading Function only works under WINXP Operating System; therefore, disable it under other Operating System.